



## **SLR541 Shut Off Valve Installation Instructions**

- 1. CONTROL STOP CAP ASSEMBLY
- 2. BONNET
- 3. VALVE SLEEVE
- 4. SPRING
- 5. SEAL RETAINER
- 6. SEAL
- 7. SLEEVE ASSEMBLY
- TURN OFF WATER AT THE WATER SYSTEM'S SOURCE, NOT AT STOP. FLUSH CLOSET/ URINAL TO RELIVE PRESSURE.
- 2. REMOVE SHUT OFF VALVE
  COVER AND LOCK RING #1.
  USING SCREWDRIVER OPEN
  THE VALVE
  (COUNTERCLOCKWISE) AND
  USING A LONG NOSE PLIERS,
  PULL OUT SLEEVE ASSEMBLY
  #7.
- 3. CLEAN INSIDE OF VALVE BODY COMPLETELY, AND REASSEMBLE WITH VALVE OFF (CLOCKWISE).
- 4. TURN ON THE WATER AT SOURCE, THEN TURN ON VALVE.

