




# Z100-EA

## ADJUSTABLE ROOF DRAIN INSTALLATION INSTRUCTIONS

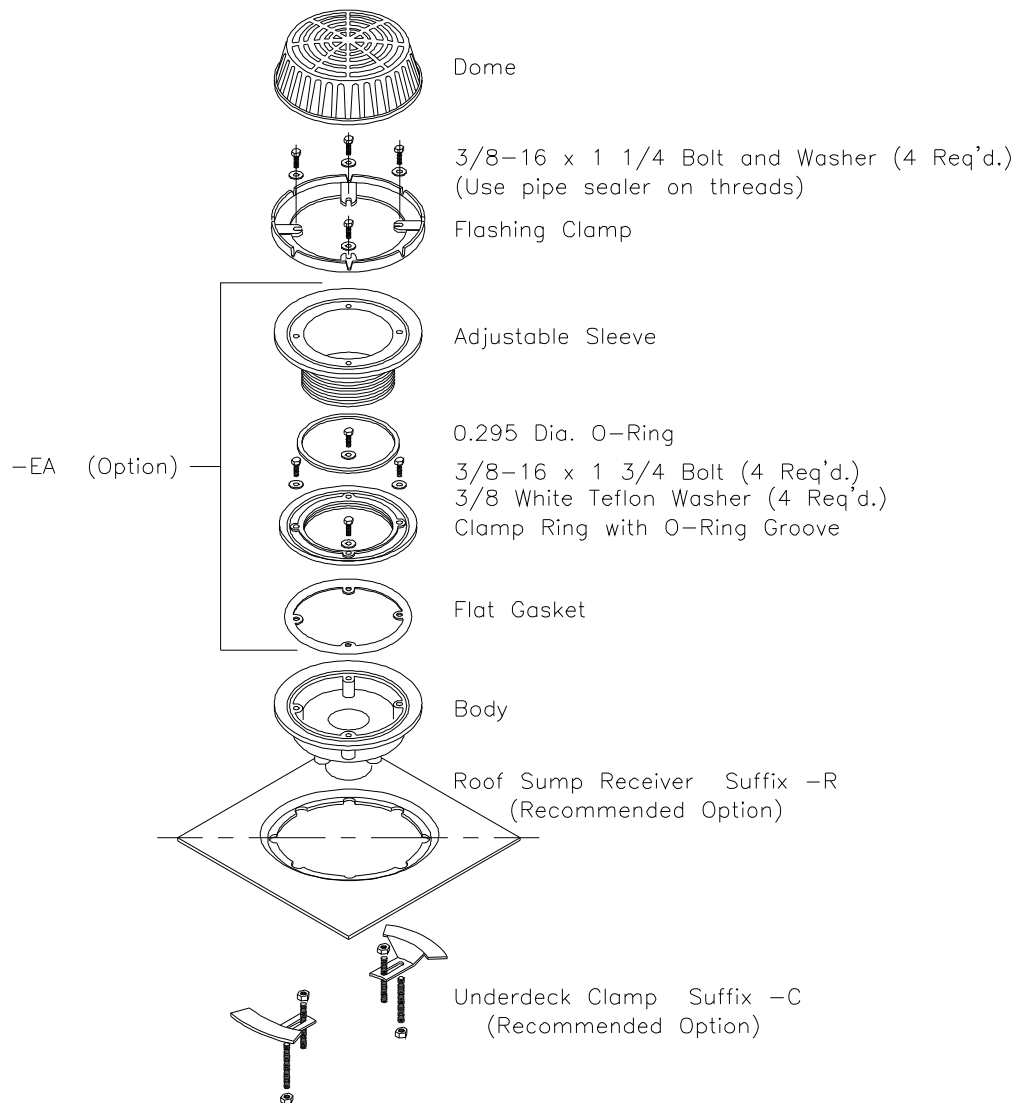

1. Place flat gasket onto flange of drain body. The flat gasket has four positioning holes which must be lined up with the four drilled and tapped holes in drain body. The gasket should smoothly lay flat on the flange of the drain body.
2. Place the clamp ring on top of the gasket by aligning the bolt holes in the clamp ring with the positioning holes in the flat gasket. Install one (1) white teflon washers onto each of the four 3/8-16 x 1-3/4 long securing bolts. Insert each securing bolt through each hole in the clamping ring and make sure the bolt also goes through the positioning holes in the flat gasket and threads into the drilled and tapped holes in the body. Hand tight only at this time. Outside diameter of gasket will be visible around the outside of the clamping ring which allows for verification the the gasket has not moved out of position.
3. Lubricate O-ring and sleeve with lubricant provided before installation.
4. Lubricate O-ring in groove of threads at inside diameter of clamp ring.
5. Thread adjustable sleeve into ring. Adjust to required height. Tighten clamp ring bolts 3/8-16 x 1-3/4 with wrench.
6. Run waterproofing membrane over top of adjustable sleeve to inside of bolt circle.
7. Install flashing clamp and secure with 3/8-16 x 1-1/4" bolts.
8. Install dome.

**Note:** Do not stack multiple -EA assemblies

Form # RD8 Date: 2/3/10 C.N. No. 110643 Rev. C