



## Z400BZ Installation Instructions




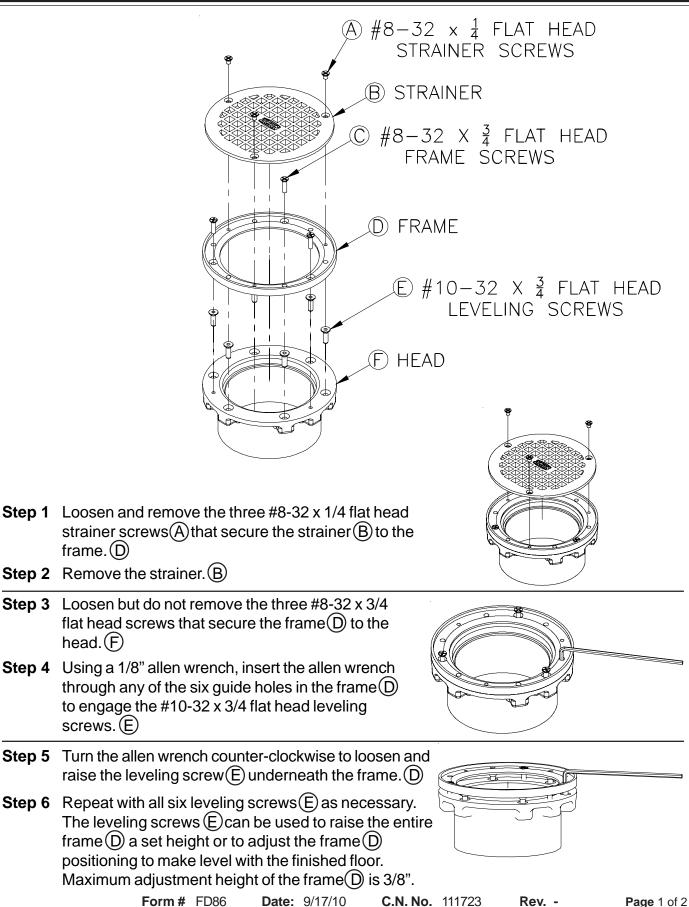

Step 7 Once the frame D is adjusted to its required postion, retighten the three #8-32 x 3/4 flat head frame screws C to secure the frame. D The frame D should now rest on all of the leveling screws. E



**Step 8** Apply a suitable and sufficient amount of sealant between the raised frame  $\bigcirc$  and the cast iron head  $\bigcirc$  to make a watertight seal.

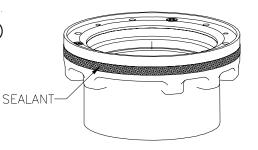

**Step 9** Replace the strainer B onto the frame D and secure strainer with the three #8-32 x 1/4 flat head strainer screws. (A)

## **INSTALLATION NOTES:**

- When adjusting the leveling screws upward to raise the frame, care should be taken to prevent damage to the existing concrete around the frame.
- The leveling screws should be adjusted in an alternating fashion to slowly raise the frame up to required position.
- Maximum flat adjustment height of the frame is 3/8".
- Maximum sloped adjustment height is 7/8" per foot.