


Z1385 POST HYDRANT Exposed Head, Non-Freeze

SPECIFICATION SHEET

TAG _____

Dimensional Data (inches and [mm]) are Subject to Manufacturing Tolerances and Change Without Notice

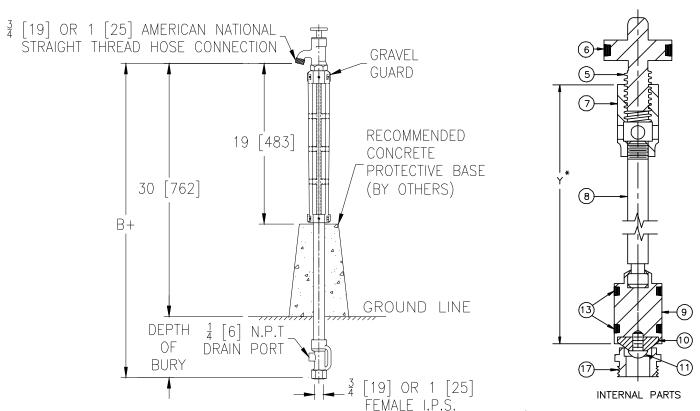

Depth of Bury Feet	B+ Dim. Feet	Approx. Wt. Lbs. [kg]	
2 [610]	4-1/2 [1372]	25 [11]	
3 [914]	5-1/2 [1676]	29 [13]	
4 [1219]	6-1/2 [1981]	33 [15]	
5 [1524]	7-1/2 [2286]	37 [17]	
6 [1829]	8-1/2 [2591]	41 [19]	
7 [2134]	9-1/2 [2896]	45 [20]	
8 [2438]	10-1/2 [3200]	49 [22]	
9 [2743]	11-1/2 [3505]	54 [24]	
10 [3048]	12-1/2 [3810]	58 [26]	

ENGINEERING SPECIFICATION: ZURN Z1385 Exposed, non-freeze post hydrant. Complete with galvanized steel casing and cast aluminum casing guard, all bronze interior parts, bronze seat and replaceable seat washer, and non-turning operating rod with free-floating compression closure valve with 3/4 [19] or 1 [25] connection. Operating key included. Hydrant is equipped with a tapped 1/4 [6] drain port in valve housing.

Note:

- 1. 'B' dim. based on outlet connection 30 [762] above ground.
- 2. <u>IMPORTANT</u> Hydrant must be opened one turn minimum to seal drain port during use.
- 3. ** Non-Freeze feature will not automatically function when (-VB suffix) vacuum breaker is specified. The vacuum breaker must be manually tripped to facilitate drainage of hydrant.

PARTS LIST

		<u>ltem</u>	<u>Name</u>	<u>Quan.</u>
OPTIONS (Check/specify appropriate options)		<u>5</u>	Operating Screw	<u>1</u>
OONNECTION TVDE		<u>6</u>	O-Ring	<u>1</u>
CONNECTION TYPE:		<u>7</u>	Operating Coupling	<u>1</u>
3/4 [19] Hose Connection		<u>8</u>	Operating Rod	<u>1</u>
1 [25] Hose Connection		<u>9</u>	Washer Guide	<u>1</u>
		<u>10</u>	Washer (neoprene)	<u>1</u>
SUFFIXES		<u>11</u>	<u>Screw</u>	<u>1</u>
BC Bronze Casing		<u>13</u>	O-Ring	<u>2</u>
RK Hydrant Parts Repair Kit		<u>17</u>	Removable Seat	<u>1</u>
VB 3/4 [19] Adapter Vacuum Breaker**				
-WH Wheel Handle	REV. J	D	ATE: 3/2/11	C.N. NO. 120961
*WHEN ORDERING REPLACEMENT PARTS SPECIFY Y DIM.	DWG. NO.	58882	2 PRODU	JCT NO. Z1385