AQUASPEC® FAUCETS

MODEL - Z81100 SERIES 4" [102] CENTERSET



TECHNICAL INFORMATION

FLOW: 2.2 GPM [8.3 L] PRESSURE COMPENSATING AERATOR

MAXIMUM PRESSURE: 125 PSI
MAXIMUM TEMPERATURE: 180° F
HANDLE NUT TORQUE: 15-20 FT-LBS

CARTRIDGE STYLE: QUARTER TURN CERAMIC DISK

*OTHER AERATORS AVAILABLE BY REQUEST

INSTALLATION INSTRUCTIONS

- 1. REMOVE FAUCET BODY FROM CARTON AND APPLY PLUMBERS PUTTY TO UNDERSIDE OF BODY.
- 2. PLACE FAUCET ON SINK AND REMOVE BRASS WING NUTS (ITEM #5A) FROM BAG G60502.
- 3. HAND TIGHTEN BRASS WING NUTS FROM UNDER SINK. MAKE SURE FAUCET IS CENTERED PROPERLY. **DO NOT OVER TIGHTEN**.
- 4. ATTACH LAVATORY SUPPLIES TO FAUCET WITH RISER NUTS (ITEM #5B).
- 5. OPTIONAL: POP-UP (-P)

 GRID STRAINER (-G)

 ADA OFFSET GRID DRAIN (-GH)

INSTALL POP-UP OR GRID STRAINER IN SINK OUTLET AND PLUMB WASTE CONNECTION.

- 6. TURN SUPPLY WATER ON AND OPERATE FAUCET CHECKING FOR LEAKS.
- 7. IT MAY BE NECESSARY TO SHUT WATER OFF AND REMOVE CARTRIDGES TO CLEAN SUPPLY LINES. CARTRIDGES CAN BE REMOVED BY FIRST REMOVING THE HANDLES. COLOR INDEXES CAN BE REMOVED BY INSERTING A PIN INTO THE HOLE ON THE UNDERSIDE OF THE HANDLE. AFTER THE HANDLES HAVE BEEN REMOVED, UNSCREW THE HANDLE NUTS AND PULL UP ON THE CARTRIDGE.
- 8. REPLACE CARTRIDGES IN BODY AND HAND TIGHTEN HANDLE NUTS. PLACE HANDLES ON THE CARTRIDGE STEM AND LOCATE THEM AS DESIRED. TIGHTEN HANDLE NUT TO 15-20 FT-LBS OF TORQUE.
- 9. REPLACE HANDLE SCREWS AND COLOR INDEX BUTTONS.
- 10. INSTALL AERATOR INTO FAUCET AND HAND TIGHTEN. IT MAY BE NECESSARY TO UNSCREW AND CLEAN AERATOR AT START-UP.

ZURN INDUSTRIES, LLC. ♦ COMMERCIAL BRASS OPERATION ♦ 5900 ELWIN BUCHANAN DRIVE ♦ SANFORD NC 27330
Phone: 1-800-997-3876 ♦ Fax: 919-775-3541 ♦ World Wide Web: www.zurn.com
In Canada: ZURN INDUSTRIES LIMITED ♦ 3544 Nashua Drive ♦ Mississauga, Ontario L4V1L2 ♦ Phone: 905-405-8272 Fax: 905-405-1292


Form#CF94 Date: 1/3/12 C.N. No. 128466 Rev. F

MAINTENANCE

- 1. YOUR ZURN AQUASPEC FAUCET HAS A HIGHLY POLISHED NICKEL CHROME PLATED FINISH. CLEAN WITH SOAPAND WATER OR A MILD CLEANER WHICH IS SAFE FOR CHROME PLATING. DO NOT USE ACIDS OR TOILET BOWL CLEANER AS THEY WILL DAMAGE THE FINISH.
- 2. AQUASPEC FAUCETS CONTAIN CERAMIC DISK CARTRIDGES WHICH REQUIRE NO MAINTENANCE. TO REMOVE THE CARTRIDGE, SHUT THE WATER OFF, LOOSEN THE HANDLE NUTS AND PULL UP ON THE CARTRIDGE.

REPLACEMENT PARTS

COLD WATER CARTRIDGE	59517001	
OOLD WATER OARTRIDGE	33317001	
HOT WATER CARTRIDGE	59517002	
HOT WATER CARTRIDGE	39317002	
INDEX BUTTONS	G60500	
INDEX BUTTONS	900300	

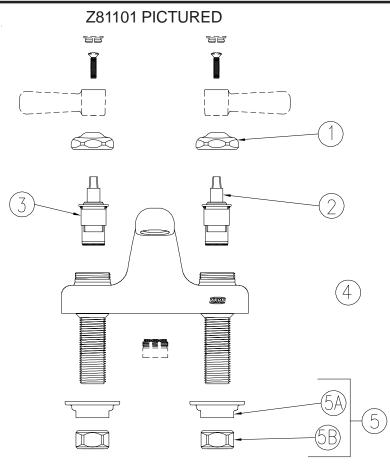

Z-81100 PARTS LIST

ПЕМ			QTY	ПЕМ			QTY
2 5	59440001 59517001 59517002 92109001	HANDLE NUT SHORT COLD CARTRIDGE SHORT HOT CARTRIDGE BODY	2 1 1	5 5A 5B	G60502 59530002 59532001	MOUNTING HARDWARE MOUNTING NUT 1/2" NPSM RISER NUT	1 2 2

Form # CF94 Date: 1/3/12 C.N. No. 128466 Rev. F